

Dresser Mirror with Short Posts Instructions




Free phone: 0800 22 22 10
www.furnituretree.co.nz



Step 1.
You will need a Phillips screw driver or a drill, a pencil or a pen, and a measuring tape. Open up your pack; you should have four screws and two short posts.



Step 2.
Measure the width of the dresser and mark the centre on the back.

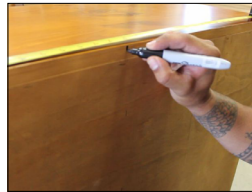


Step 3.
At the bottom of the mirror mark the centre on the back.



Step 4.
Mark the posts so that the hole is at the centre top of the cabinet.



Step 5.
attach the post to the mirror.

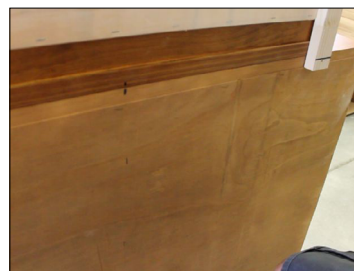

Step 6.
Place mirror on dresser and bring the marks to alignment.



Step 7.
Screw into the back of top of the dresser.

To find video instructions go here:

<http://furnituretree.co.nz/index.php/help-faq>